

# Calphalon®

## 2 & 4 Slot Toaster QUICK START GUIDE

Models HE201ST / 1832632 & HE401ST / 1832634

**NOTE:** Calphalon makes two slot and four slot toasters. This guide includes instructions for both models.

### GETTING STARTED

#### Step 1: UNPACK

- Carefully remove the toaster from the packaging. Remove any stickers or temporary labels from the toaster.
- Make sure packing materials are removed from the toasting slots.
- Place the toaster on a clean, dry, sturdy surface that is clear from any potentially flammable materials.
- Ensure the crumb tray is properly installed. The crumb tray is located at base of the toaster on the opposite side from the controls. The tray should be inserted completely.
- Plug the power cord into a suitable 110V/120V AC electrical outlet away from the edge of a counter or table.



### WARNING!

Your Calphalon 2 or 4 Slot Toaster features cool-touch plastic on the sides, front and back; however, the chrome plate on the top of the toaster is made from metal and will be hot during and after a toasting cycle. To prevent burns or personal injury, please do not touch this chrome plate during or after a toasting cycle. Always exercise caution when removing toasted breads from the toaster.


#### Step 2: BEGIN TOASTING

- Load** – Place one slice of bread at a time in each toasting slot. For best results, use a similar type and thickness of bread in a single toasting cycle. If toasting large items such as bagels or English muffins; cut them in half and place one half in each slot. Position the cut sides facing the center of the toaster.

### CAUTION!

Do not operate toaster empty.

**Attention 4 Slot Toaster Owners** – Your toaster is equipped with two independently controlled pairs of toasting slots. There are two control panels that may be used on different settings at the same time.

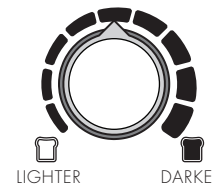

• **Select shade** – Turn the Shade Control Knob to choose the desired level of browning. For your first toasting cycle, you may want to try the midpoint on the Shade Control Knob, or refer to the **Suggested Settings** chart for specific bread types.

• **Lower lever** – Press the lever down until it locks into place. The toaster cycle will begin once the lever is fully engaged.

• **Choose mode** – If toasting BREAD, the toaster is ready for operation.

**Bagel** Press “Bagel” for sliced bagels. Only the inside heating elements will turn on in each toasting unit. This toasts the cut sides of the bagel without overbrowning the exterior.

**Defrost** Press “Defrost” for frozen breads or pastries. The toaster will begin by thawing the frozen item and then automatically toasting it to the desired level of browning. Inspect frozen toaster pastries or strudels to make sure they are not leaking any filling.

**Reheat** Press “Reheat” button if you’ve already toasted something and want to quickly reheat it for serving. You do not need to make a shade selection for this mode, since this is simply a reheating mode and not a browning process.

• **Remove toast** – Once the toasting cycle is complete, the lever will release. If needed, pull the lever up slightly to assist in removing your toasted item.

### CANCELLING A TOASTING CYCLE

**Cancel** If you need to stop the toaster for any reason, press “Cancel” or disengage the lever.

### SUGGESTED SETTINGS

The following chart is meant to serve as a general guide for choosing the appropriate toaster settings. Experiment a bit to identify your preferred settings.

Type of Bread	Setting (for medium browning)	Type of Bread	Setting (for medium browning)
White sandwich bread		English muffins (sliced)	<b>Bagel</b>
Wheat or rustic breads		Frozen waffles	<b>Defrost</b>
Toaster pastry tarts		Frozen toaster pastries/scrambles	<b>Defrost</b>
Bagels (sliced)	<b>Bagel</b>		

Calphalon®

A **NewellRubbermaid** Company

calphalon.com

©2012

	BLACK
QUICKSTART GUIDE TRI-FOLD (US)	
VERSION: _____	DATE: _____
PROJECT INITIATOR: _____	DATE: _____
DESIGNER: _____	DATE: _____
COPY APPROVER: _____	DATE: _____